

# S.O. TECH

CUSTOM NYLON TACTICAL GEAR


BUILT TO SURVIVE THE  
WORLD'S WORST™




Made in the USA  
(800) 615-9007  
SpecOpsTech.com

## Flex-Tab™ Attaching System™


U.S. Patent Pending

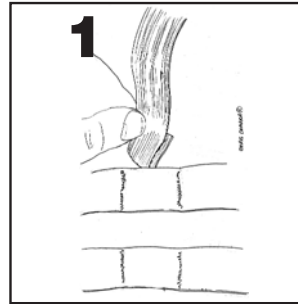


1  
Feed pouch tab through  
top web slots on panel.

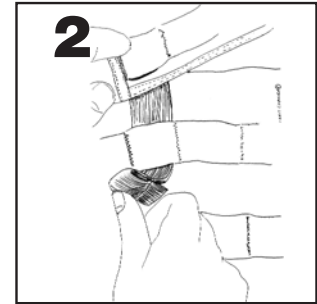


2  
Pull tab through web slot  
on panel.

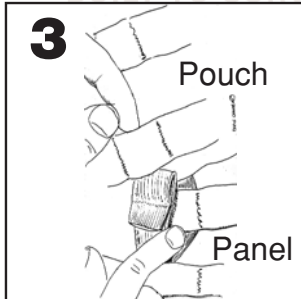

3  
Feed tab through web slot on  
pouch. Continue weaving tab  
through consecutive web slots.

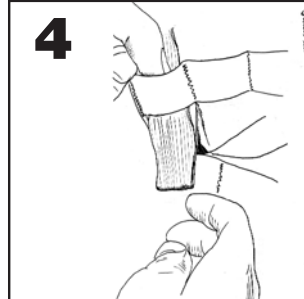

4  
Push Flex-Tab™ through  
bottom pouch web slot.

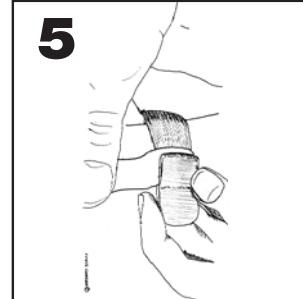

5  
Pull Flex-Tab™ & hook tab  
on bottom web strap.



Reverse order to remove  
pouch from panel.